

2017 Acura NSX

Carwash Mode



Procedure to keep the transmission in N position (car wash mode).

With the engine running:

1. Press and hold the brake pedal.
2. Within five seconds select **N**.
3. Then press and hold the **ENGINE START/STOP** button.
 - + This puts the vehicle in car wash mode which must be used when your vehicle is pulled through a conveyor type automatic car wash where you or an attendant do not remain in the vehicle.
 - + The gear position remains in **N** with the power mode in **ACCESSORY** for 15 minutes, then it automatically changes to **P** and the power mode changes to off.

Manually changing to **P** cancels **ACCESSORY** mode. The **P** indicator comes on and the

power mode changes to **OFF**.



- + Appears when you change to **N**, and press the **ENGINE START/STOP** button within five seconds.
- + The gear position remains in **N** for 15 minutes, then automatically switches to **P**.
- + Appears when the vehicle is stopped with the driver's seat belt unfastened and there is a chance that the vehicle may roll unintentionally.
- + Press the **P** button before release the brake pedal when idling, parking or exiting the vehicle.