

# 2024 Aston Martin DB12

## Transmission



### Automatic Transmission Fault Conditions

#### Limp Home Conditions

If a fault is detected the vehicle will go into one of three limp home modes:

#### Electrical

GEARBOX FAULT REDUCED FUNCTION will show in the instrument cluster. Touchtronic and sport modes will be disabled and gearshifts will not be possible. The transmission will select either 3rd or 6th gear depending on the vehicle speed at the time of the fault. *Contact your Aston Martin Dealer.*

*In certain circumstances forward drive will be restricted to a fixed gear.*

#### Mechanical

LIMPHOME NO GEAR CHANGE will show in the instrument cluster and a warning sound will be heard. If traveling in auto drive or touchtronic mode the vehicle will go into 6th gear. If entering mechanical limp home mode in any position other than auto drive or touchtronic mode, the park-lock will come on. *Contact your Aston Martin Dealer.*

### Transmission Parklock

If the vehicle fails to start or has broken down, the automatic transmission will move into P (Park) to prevent unintended vehicle movement. The parklock will not release. *Call Aston Martin Assistance.*

### Engage Neutral Manually

#### ONLY TO BE DONE BY ASTON MARTIN ASSISTANCE

Transmission will only select Neutral with engine running or mechanical over ride which uses a 5mm allen socket.

Remove allen screw A and insert into B to engage neutral.

Locations as per picture.

