

2021 Alfa Romeo Giulia


Tire Sealant Cartridge Replacement



Note: Only use original cartridges, which can be purchased at an authorized dealer.

PROCEED AS FOLLOWS:

- 1 Remove the sealant cartridge by pushing the release button located on the side of the compressor.
- 2 Insert the new sealant cartridge by pushing downward firmly.

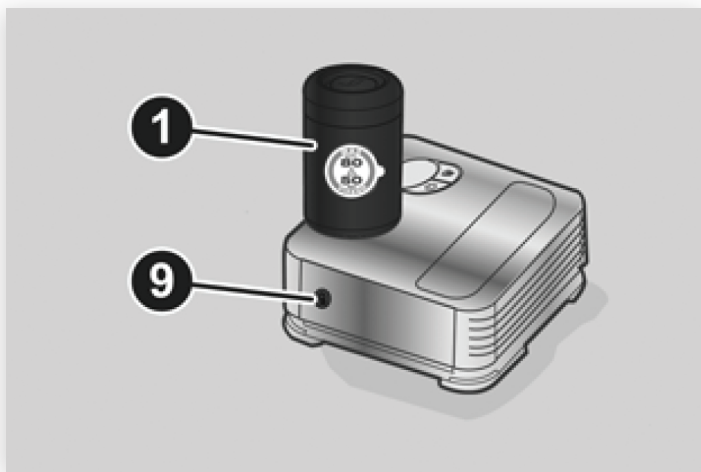

Sealant Cartridge Replacement

- 1. Sealant Cartridge
- 9. Release Button