

2024 Fiat 500e

Towing Instructions



Towing Condition	Wheels OFF The Ground	Single-Speed Transmission
Flat Tow	NONE	NOT ALLOWED
Wheel Lift or Dolly Tow	Rear	NOT ALLOWED
	Front	NOT ALLOWED
Flatbed	ALL	OK

This vehicle must be towed with the wheels OFF the ground.

The tow ring provided with the car is housed in the tool bag under the boot mat. The car may not be towed. It can only be transported on a tow truck.

CAUTION!

- Do not use sling type equipment when towing. Vehicle damage may occur.
- When securing the vehicle to a flat bed truck, do not attach to front or rear suspension components. Damage to your vehicle may result from improper towing.


To avoid damage to your vehicle or tires, observe the following precautions:

- Because of restricted traction device clearance between tires and other suspension components, it is important that only traction devices in good condition are used. Broken devices can cause serious damage. Stop the vehicle immediately if noise occurs that could indicate device breakage. Remove the damaged parts of the device before further use.
- Install device as tightly as possible and then retighten after driving about ½ mile (0.8 km).
- Do not exceed 30 mph(48 km/h).
- Drive cautiously and avoid severe turns and large bumps, especially with a loaded vehicle.
- Do not drive for a prolonged period on dry pavement.
- Observe the traction device manufacturer's instructions on the method of installation, operating speed, and conditions for use. Always use the suggested operating speed of the device manufacturer's if it is less than 30mph (48 km/h).

ATTACHING THE TOW HOOK


Proceed as follows:

- Release the cap.

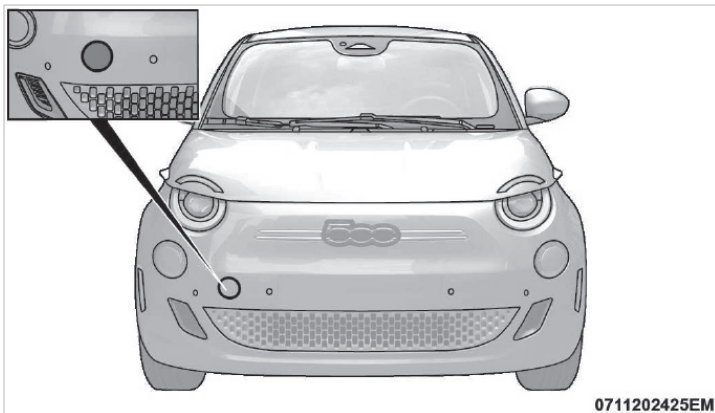

Front Tow Hook Location

- Take the tow ring out of its housing in the tool support.
- Fully tighten it on the threaded pin.

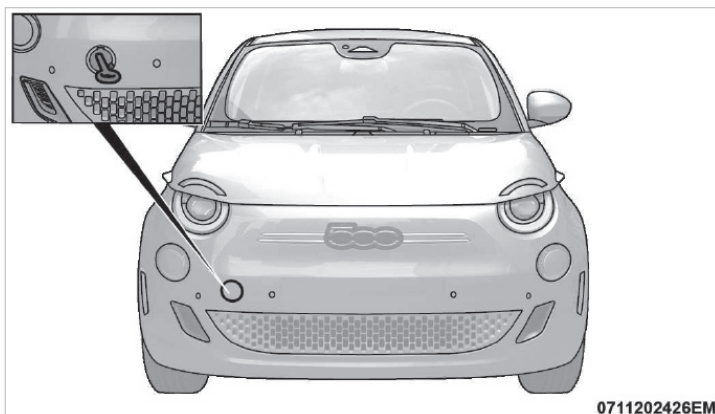

Front Tow Hook Installed

CAUTION!

- Before tightening the ring clean the threaded housing thoroughly. Make sure that the ring is fully fastened in the housing before towing the car.