


2018 - 2025 Porsche Panamera- Towing

Using Flatbeds

- Select gear **N**.
- Switch off operational readiness. The vehicle can be rolled for approx. 30 minutes, then the transmission parking lock engages automatically.
- Position ramps at the flatbed base to flatten the angle when pulling.
- Reel in winch cable and check vehicle underbody for obstacles.
- Carefully guide the tie-down belts through the openings in the rear wheels.
- Fasten the belts to the rear of the flatbed.
- Reel in the winch cable only until the tie-down belts are taut.
- Carefully guide the tie-down belts through the openings in the front wheels.

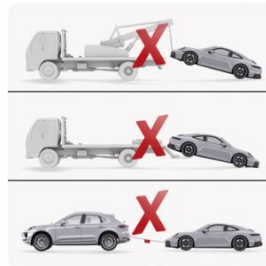

NOTE: We offer these best practices as a courtesy. Network participants remain solely responsible for the appropriate training and management of their personnel, following any and all industry standards for safety, and ongoing compliance with all local, state, federal laws, rules and regulations.

2018 - 2025 Porsche Panamera- Towing

Using a Tow Eye



The towing eye is stored in the tool box

Press the lower edge of the appropriate plastic cover into the bumper until it disengages

Pull the plastic cover out of the bumper and let it hang by its thread

Screw in the towing hook as far as possible counter-clockwise (**left-hand thread**)

NOTE: We offer these best practices as a courtesy. Network participants remain solely responsible for the appropriate training and management of their personnel, following any and all industry standards for safety, and ongoing compliance with all local, state, federal laws, rules and regulations.